

Retractable Awning

Programming the Remote Control

Note: Retractable Awning should be closed before programming.

Step 1. Connect the motor power cord to wall/electrical outlet.

Step 2. Press the **P2** button twice on the back of the remote control. (listen for beep)

Step 3. Press and hold the **Down** button on the front of the remote control until beeping stops. (listen for beep)

Programming is completed. To open the Retractable Awning, simply push the **Down** button and to close simply push the **Up** button.

Troubleshooting Guide

Problem #1 - If the awning goes out after pressing the **UP** button, perform the following steps:

Press the **P2** button once (reverse side).

Press the **OK** button once.

Press the **P2** button once (reverse side).

Unplug the power cord for 5 sec. then re-plug (this will erase the existing setting).

Press the **P2** button twice (reverse side).

Press the **UP** button once, **if**, the fabric rolls out on the left side of the tube (facing the motor end).

Note: Press the **DOWN** button once, **if**, the fabric rolls out on the right side the tube.

Press the **OK** button once

Adjusting the Motor Settings

Viewed facing the motor end

If fabric rolls out

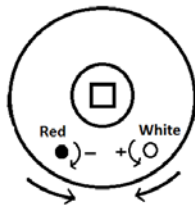
Top Left  or  Bottom Right

To adjust the **UP** position turn the **WHITE** key. First, fully close the shade.



- To retract the **UP** position – turn the key counter-clockwise.
- To extend the **UP** position – turn the key clockwise.

To adjust the **DOWN** position turn the **RED** key. First, fully open the shade.

- To extend the **DOWN** position – turn the key counter-clockwise.
- To retract the **DOWN** position – turn the key clockwise.



If fabric rolls out

Bottom Left  or  Top Right

To adjust the **UP** position turn the **RED** key. First, fully close the shade.

- To retract the **UP** position – turn the key counter-clockwise.
- To extend the **UP** position – turn the key clockwise.

To adjust the **DOWN** position turn the **WHITE** key. First, fully open the shade.

- To extend the **DOWN** position – turn the key counter-clockwise.
- To retract the **DOWN** position – turn the key clockwise.

Open or close the shade partially then reclose or reopen to test the new position. It may be necessary to continue adjusting to reach the desired position.